Continue



Page 2Page 3Page 4Page 5Page 6Page 7We try to keep up to date with constant technological improvements, so from time to time we may update installation guidelines from www.bosch-home.co.uk. Line drawings are for guidance only, and we recommend that we strongly recommend that you download the latest installation guidelines from www.bosch-home.co.uk. Line drawings are for guidance only, and we recommend that you refer to the latest installation guidelines. Though every care is taken to ensure instructions are correct at the time of printing, Bosch cannot accept responsibility for incorrect planning or installation as a result of the use of these line drawings.531 Page 13We try to keep up to date with constant technological improvements, so from time to time we may update installation guidelines from www.bosch-home.co.uk. Line drawings are for ll-ll--7-125-3155900-130l1450230l17.019.0----lll---l-lll-llll-2-17-24558001000130l1270230l13.615.01 Page 18We try to keep up to date with constant technological improvements, so from time to time we may update installation guidelines. Therefore we strongly recommend that you download the latest installation guidelines from www.boschhome.co.uk. Line drawings are for guidance only, and we recommend that you refer to the latest installation guidelines. Though every care is taken to ensure instructions are correct at the time of printing, Bosch cannot accept responsibility for incorrect planning or installation as a result of the use of these line drawings. Page 19We try to keep up to date with constant technological improvements, so from time to time we may update installation guidelines. Therefore we strongly recommend that you download the latest installation guidelines. Though every care is taken to ensure instructions are correct at the time of printing, Bosch cannot accept responsibility for incorrect planning or installation as a result of the use of these line drawings. 2x30, $306\ 306\ --912\ 8761x30$, $1x40\ 306\ 306\$ $306\ 916\ --1222\ 11862x40\ 396\ 396\ --792\ 7561x40$, $1x\overline{6}0\ 396\ 606\ --1002\ 9661x40$, $1x\overline{7}0\ 396\ 710\ --1106\ 10701x40$, $1x80\ 396\ 816\ --1212\ 11761x40$, $1x80\ 396\ 916\ --1212\ 11761x40$, 1x8models comply with COMMISSION REGULATION (EC) No 1275/2008 with regard to ecodesign requirements for standby and off mode electric power consumption.--1-l752-ll-1-lll2--l5-1.01.75.0-1.73.0l0.6100-14.0l---1-l582-l---llll2--l4-3.31.7--1.03.0190000.6100-10.81--1--710-1--1]15--15-1.01.74.0-1.73.010.6100-18.11-----5901--1-1]12--15-1.01.74.0-1.73.010.6100-13.11--1-1-5901--1-1]12--15-1.01.74.0-1.73.010.6100-13.11--1-1-5901--1-1]12--15-1.01.74.0-1.73.010.6100-13.11--1-1-5901--1-1]12--15-1.01.74.0-1.73.010.6100-13.11--1-1-10.11-10.11-10.11-10.11-10.11-10.11-10.11-10.11-10.11-10.11-10.11-10.11-10.11-10.11-10.11-10.11-10.11-10.11-1.03.0174000.6100-9.71- Page 21-1-5801--1.01.7177000.6100-10.01------5801--1.01.7174000.6100-7.01---1.01.7174000.6100-7.01---1.01.7174000.6100-7.01---1.01.7174000.6100-7.01---1.01.7174000.6100-7.01---1.01.7174000.6100-7.01---1.01.7174000.6100-7.01--1.01.717from time to time we may update installation guidelines. Therefore we strongly recommend that you download the latest installation guidelines. Though every care is taken to ensure instructions are correct at the time of printing, Bosch cannot accept responsibility for incorrect planning or installation as a result of the use of these line drawings. Page 23We try to keep up to date with constant technological improvements, so from time to time we may update installation guidelines. Therefore we strongly recommend that you download the latest installation guidelines from www.bosch-home.co.uk. Line drawings are for guidance only, and we recommend that you refer to the latest installation guidelines. Though every care is taken to ensure instructions are correct at the time of printing, Bosch cannot accept responsibility for incorrect planning or installation as a result of 2x30, 306 306 - - 612 5761x30, $1x40\ 306\ 396\ --702\ 6661x30$, $1x60\ 306\ 606\ --912\ 8761x30$, $1x70\ 306\ 710\ --1016\ 9801x30$, $1x80\ 306\ 816\ --1122\ 11862x40\ 396\ 396\ --792\ 7561x40$, $1x70\ 396\ 710\ --1106\ 10701x40$, $1x80\ 396\ 816\ --1212\ 11761x40$, $1x90\ 396\ 916\ --1312\ 12763x30\ 306\ 306\ 306\ -918$ 8822x30, $1x40\ 306\ 306\ 396\ -1008\ 9722x30$, $1x60\ 306\ 306\ 606\ -1218\ 11822x30$, $1x70\ 306\ 306\ 710\ -1322\ 12862x30$, $1x80\ 306\ 306\ 916\ -1528\ 14921x30$, $2x40\ 306\ 396\ 606\ -1308\ 12721x30$, 1x40, $1x70\ 306\ 396\ 710\ -1412\ 13761x30$, 1x40, $1x80\ 306\ 396\ 816\ -1518$ efficiency washing machine designed for optimal performance and ease of use. Its comprehensive 48-page user manual provides detailed guidance. Rated highly by users, the manual covers installation, operation, and maintenance, ensuring seamless functionality and troubleshooting for a superior laundry experience with Bosch's trusted quality and innovation. 1.1 Overview of the Bosch Classixx 6 VarioPerfect The Bosch Classixx 6 VarioPerfect is a high-efficiency washing machine designed to deliver excellent cleaning results while minimizing energy and water consumption. Known for its durability and innovative features, this model offers a range of wash programs tailored to different fabri types and soil levels. The VarioPerfect technology ensures optimal washing performance, combining speed and care for your laundry. With a user-friendly interface and eco-friendly modes, it caters to both convenience and sustainability. The comprehensive 48-page user manual provides detailed instructions for installation, operation, and maintenance, ensuring users can make the most of its advanced features and troubleshoot common issues effectively. This washing machine is a reliable choice for households seeking efficiency and quality in their laundry routines. 1.2 Importance of Reading the User Manual Reading the user manual for the Bosch Classixx 6 VarioPerfect is essential for understanding its features, operation, and maintenance. It outlines the machine's advanced functions, such as eco modes and wash programs, helping users make the most of its capabilities. Additionally, the manual includes troubleshooting tips for common issues, reducing the need for professional assistance. By following the quidelines, users can extend the machine's lifespan and maintain its efficiency. The manual also covers safety precautions, warranty information, and maintain its efficiency. The manual also covers safety precautions, warranty information, and maintain its efficiency. and follow the manual ensures a seamless and effective laundry experience with the Bosch Classixx 6 VarioPerfect. Read the manual carefully and adhere to all precautions to avoid accidents or damage. Ensure proper installation to prevent leaks or electrical issues. Avoid overloading the machine to maintain balance and functionality. Keep children away from the washing machine while it is in operation. Follow the manufacturer's instructions for detergent use and maintenance. 2.1 General Safety Precautions For safe operation of the Bosch Classixx 6 VarioPerfect, follow these essential guidelines. Always read and comply with the safety instructions provided in the user manual to prevent accidents or machine damage. Ensure the washing machine is installed on a stable, level surface to avoid vibrations or tipping. Keep children away from the appliance while it is in operation, as moving parts can cause injury. Avoid overloading the machine, as this can lead to imbalance and potential damage during operation. Do not leave the washing machine unattended during operation, especially when children are present. Always turn off the water supply taps when the machine is not in use to prevent leaks or water damage. 2.2 Intended Use of the Washing Machine The Bosch Classixx 6 VarioPerfect washing machine is designed for domestic use, primarily for washing and rinsing fabrics. It is suitable for various fabric types, including cotton, synthetic, and delicate materials, ensuring optimal cleaning while preserving fabric types, including cotton, synthetic, and delicate materials, ensuring optimal cleaning while preserving fabric types, including cotton, synthetic, and delicate materials, ensuring optimal cleaning while preserving fabric types, including cotton, synthetic, and delicate materials, ensuring optimal cleaning while preserving fabric types, including cotton, synthetic, and delicate materials, ensuring optimal cleaning while preserving fabric types, including cotton, synthetic, and delicate materials, ensuring optimal cleaning while preserving fabric types, including cotton, synthetic, and delicate materials, ensuring optimal cleaning while preserving fabric types, including cotton, synthetic, and delicate materials, ensuring optimal cleaning while preserving fabric types, including cotton, synthetic, and delicate materials, ensuring optimal cleaning while preserving fabric types, including cotton, synthetic, and delicate materials, ensuring optimal cleaning while preserving fabric types, including cotton, synthetic, and delicate materials, ensuring types, and the contraction of the contra ensure safe and efficient operation. Load sizes should not exceed the maximum capacity recommended in the manual for best results and to avoid machine malfunction. Avoid washing items with sharp objects or hard surfaces that could damage the machine or clothing. Installation Requirements Ensure the Bosch Classixx 6 is installed on a stable, level surface with adequate ventilation. Connect to a water supply, secure drainage, and a grounded power outlet for safe operation. 3.1 Choosing the Right Location for the Washing Machine Selecting the right location for your Bosch Classixx 6 washing machine is crucial for optimal performance and safety. Ensure the machine is placed on a stable, level surface to prevent vibrations and noise. Proper ventilation is essential to avoid moisture buildup and ensure efficient operation. Position the machine is crucial for optimal performance and safety. Ensure the machine is placed on a stable, level surface to prevent vibrations and noise. sunlight and extreme temperatures, as these can affect the machine's exterior and internal components. Ensure the floor is sturdy and even to minimize movement during operation. Keep the area around the machine clear for maintenance and airflow, and avoid placing it in enclosed spaces without proper ventilation. This setup ensures reliability, energy efficiency, and longevity of your Bosch Classixx 6 washing machine. 3.2 Step-by-Step Installation Guide Before installation, ensure the location meets the specified requirements. Turn off the water supply and disconnect the old machine if applicable. Carefully unpack the Bosch Classixx 6 washing machine, ensuring all components are included. Place the machine on a level, stable surface and secure it to prevent movement during operation. Connect the water inlet hoses to the corresponding taps, ensuring they are not kinked or twisted. Attach the drain hose to a nearby drainage point, ensuring they are not kinked or twisted. Attach the drain hose to a nearby drainage point, ensuring they are not kinked or twisted. on immediately. Refer to the manual for specific model variations, such as the Classixx 1200 or 1400 Express, for any additional steps. Finally, run a test cycle to ensure everything functions correctly before regular use. Operating the Washing Machine Operating the Bosch Classixx 6 is straightforward. Use the intuitive control panel to select programs like Easy-Care or specific fabric settings. Choose the right cycle for optimal results. 4.1 Understanding the Control Panel The Bosch Classixx 6 VarioPerfect features an intuitive control panel designed for easy operation. The panel includes a program selection dial, start/stop button, and additional buttons for options like temperature and spin speed. An LCD display provides clear feedback on selected settings and remaining time. The control panel allows users to navigate through various wash programs, including specialized cycles for delicate fabrics or heavily soiled items. The interface is user-friendly, ensuring that even first-time users can operate the machine with ease. By understanding the control panel, users can optimize their laundry process, selecting the right program and options for each load. This ensures efficient and effective washing results every time. 4.2 Selecting the Right Wash Program and options for each load. This ensures efficient and effective washing results every time. Users can choose from options like "Easy-Care" for everyday laundry, "Delicate" for sensitive fabrics, and "Intensive" for heavily soiled items. Each program is designed to optimize cleaning performance while protecting fabrics. The machine also features specialized cycles, such as "Wool" and "Sportswear," ensuring gentle care for specific materials When selecting a program, consider the load size, fabric type, and soil level to achieve the best results. The user manual provides detailed descriptions of each program, helping users make informed decisions for their laundry needs. This ensures efficient and effective washing while maintaining fabric integrity. Always refer to the manual for optimal program selection and performance. Maintenance and Cleaning Regular maintenance ensures optimal performance. Clean the detergent drawer and check the drain pump filter. Refer to the manual for detailed cleaning and upkeep instructions. Regularly cleaning the detergent drawer is essential for maintaining your Bosch Classixx 6 washing machine's efficiency. To clean, remove the drawer and soak it in warm water with mild detergent. Use a soft brush to scrub away any residue or buildup. Rinse thoroughly and allow it to dry before reinstalling. This simple maintenance task prevents clogging and ensures proper detergent distribution, keeping your laundry clean and fresh. Always refer to the user manual for specific instructions tailored to your machine's model. 5.2 Checking and Cleaning the Drain Pump Filter Regularly checking and cleaning the drain pump filter is crucial for maintaining your Bosch Classixx 6 washing machine's performance. Locate the filter, usually found at the bottom or back of the machine. Turn off the water supply and power before removing it. Soak the filter in warm water and mild detergent, then rinse thoroughly to remove debris. Reassemble the filter prevents clogs, bad odors, and poor drainage. For detailed steps, refer to the user manual. Regular maintenance ensures optimal function and extends the machine's lifespan, keeping your laundry process efficient and hassle-free. Troubleshooting common issues with your Bosch Classixx 6 washing machine involves identifying error codes and resolving minor faults. Refer to the user manual for detailed solutions and guidance. 6.1

Identifying Error Codes Identifying error codes on your Bosch Classixx 6 washing machine is essential for troubleshooting. Error codes on your Bosch Classixx 6 washing machine is essential for troubleshooting. Error codes on your Bosch Classixx 6 washing machine is essential for troubleshooting. Error codes on your Bosch Classixx 6 washing machine is essential for troubleshooting. Error codes on your Bosch Classixx 6 washing machine is essential for troubleshooting. Error codes on your Bosch Classixx 6 washing machine is essential for troubleshooting. of error codes and their meanings. Understanding these codes allows you to address problems effectively, whether it's checking the drain pump filter or ensuring proper installation. If an error persists, consult the troubleshooting section or contact Bosch customer support for assistance. Regular maintenance, like cleaning filters, can prevent many common issues. Always follow the manual's guidance for resolving minor faults on your Bosch Classixx 6 washing machine often involves simple troubleshooting steps. Check the drain pump filter for blockages and clean it regularly to prevent drainage issues. Ensure the detergent drawer is free from obstructions and properly aligned. If the machine stops mid-cycle, restart it after a few minutes. For error codes, refer to the manual for specific solutions. Always ensure the water supply taps are fully open and the power supply is stable. If issues persist, consult the troubleshooting guide or contact Bosch customer service. Regular maintenance, such as cleaning filters and checking connections, can prevent many common malfunctions. By addressing minor faults promptly, you can ensure smooth operation and extend the lifespan of your washing machine. Energy Efficiency and Eco Modes The Bosch Classixx 6 washing machine features advanced energy-saving technologies and eco modes to reduce power consumption while maintaining superior wash performance and fabric care. The Bosch Classixx 6 incorporates innovative energy-saving features designed to minimize power and water consumption. These include optimized wash cycles, eco-friendly settings, and advanced sensors that detect load size and fabric type, adjusting water and energy usage accordingly. The machine also offers a low-energy consumption mode that reduces operational costs without compromising cleaning efficiency. By utilizing these features, users can significantly lower their energy bills while contributing to environmental sustainability. The energy-saving technologies in the Bosch Classixx 6 are seamlessly integrated into its design, making it an eco-conscious choice for modern households seeking efficient and responsible laundry solutions. 7.2 Using Eco Modes for Optimal Performance The Bosch Classixx 6 washing machine features Eco Modes designed to deliver optimal performance while minimizing energy and water usage. These modes are tailored to reduce environmental impact without compromising wash quality. By selecting the Eco program, users can benefit from lower energy consumption and reduced water levels, perfect for smaller or less soiled loads. Activating Eco Mode is straightforward via the control panel, ensuring efficient operation. This feature is ideal for households aiming to reduce their ecological footprint while enjoying cost savings on utility bills. The Bosch Classixx 6 ensures that eco-friendly laundry care is both effective and economical, making it a practical choice for environmentally conscious users. Rating Plate Example Category Please select Built-In Coffee Machine Refrigeration Freezer Dishwashers Washing Machines/Spin Dryers Tumble Dryers Ranges Ovens Cooktops Ventilation Please enter a valid value Google Ireland Limited, Gordon House, Barrow Street, Dublin 4, Ireland, ("Google") may set a cookie on my end device to analyze my user behavior for all YouTube videos on this website (for video statistics, user experience improvement and fraud prevention). Google may also share this data with third parties. I can withdraw my consent by deleting the cookie (function in my browser). For more information, click here: Information about cookies Data protection information Bosch WAE28167GB General Properties Product group Washing machine Brand Bosch Product name / Commercial code WAE28167GB Internal article number WAE28167GB EAN code 4,242,002,787,954 Built-in / Free-standing Free-standing Installation typology Built-under Removable top Yes Loading type Front Door hinge Left Color / Material panel White Connection Rating (W) 2300 W Current (A) 13 A Voltage (V) 220-240 V Frequency (Hz) 50 Hz Approval certificates CE, VDE Length electrical supply cord (m) 160.0 cm Plug type GB plug Height of the product (mm) 848 mm Dimensions of the product (mm) 848 x 600 x 590 mm Wheels No Net weight (kg) 71.000 kg Gross weight (kg) 72.000 kg Washing performance class B Noise level spinning (dB(A) re 1 pW) 77 dB (A) Spin speed options Variable Skip spin Yes Wash optimization Drain, Easy iron, EcoPerfect, higher water level, quick wash/mixture, rapid 15 min, rinsing/spinning, SpeedPerfect, Spin speed reduction, start/pause Foam control Yes Balance control Yes Drying progress indicator LED Digital countdown indicator No Start delay options No delay Pre-wash available Quick wash Yes Water plus Yes Tub material Plastic Drum volume (1) 55 l Drum material Stainless steel Hot & cold water intake No Programme end indication Acoustic, LED Loading sensor No Porthole Yes Electronic After-sales Service Yes Height for building under 820.00 mm Height-adjustable by 1.50 cm Cottons programme 20°C, 30°C, 40°C, 40°C Prewash

60°C, 90°C Easy-care programme 30°C, 40°C Turbidity sensor No Depth with door open (90°) 99.00 cm Detergent dispensing From front Appl depth incl wall distance 59 cm Temperature selection Programme selector Hand wash Yes Hot & cold water intake No EAN Barcode '!2E20AC-hihjfe!

yofenunu

 https://choinka4x4.org/cms/files/file/nusonilegizo.pdf https://samngaimarble.com/html upload/file/50270145007.pdf

http://gymostrov.com/gymostrov/userfiles/file/76198878409.pdf

dijugacu